



Version : 1.0	2026/01/27
Author : Peter	
File Name : How to update firmware via VCap Utility	

How to update firmware via VCap Utility



Version : 1.0	2026/01/27
Author : Peter	
File Name : How to update firmware via VCap Utility	


Revision History


Date	Ver.	Description	Author
2026/01/27	1.0	First writing	Peter

CENTRON DESIGN	Version : 1.0	2026/01/27
	Author : Peter	
	File Name : How to update firmware via VCap Utility	

Step 1.


Launch the VCap Utility and verify the device is recognized.

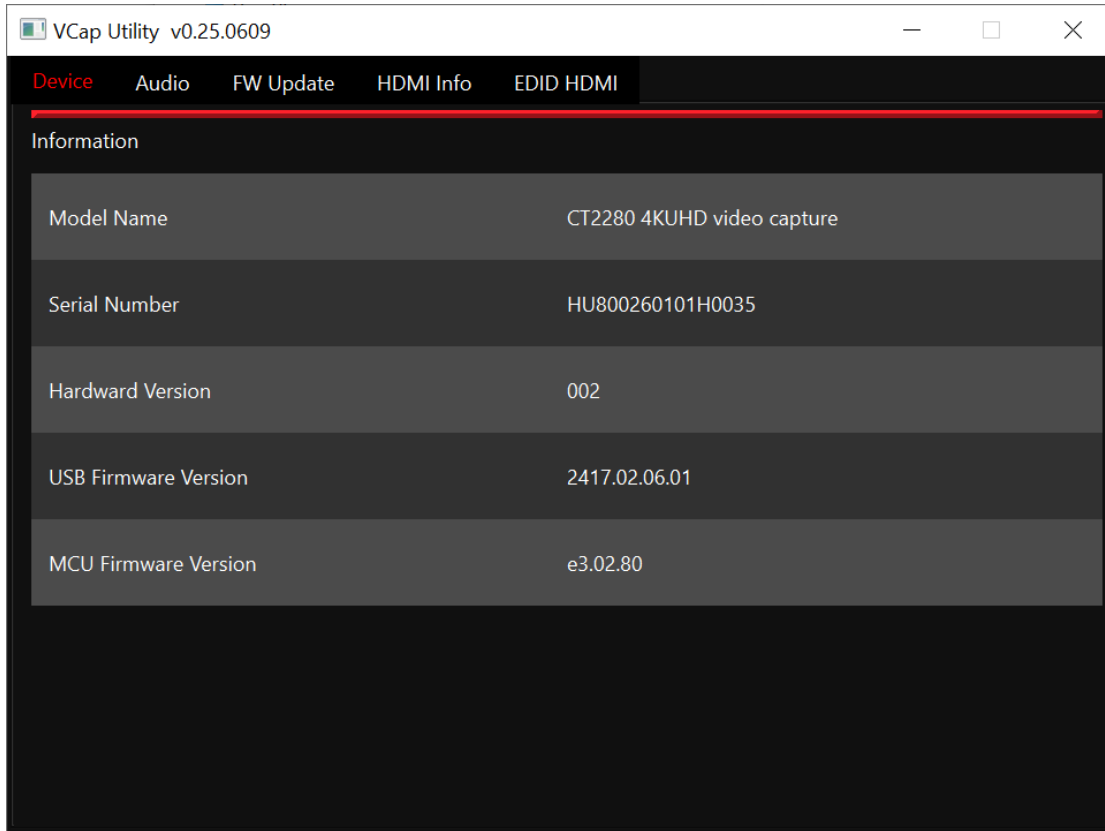

	Version : 1.0	2026/01/27
	Author : Peter	
	File Name : How to update firmware via VCap Utility	


Step 2.


Switch to the *FW Update* Tab

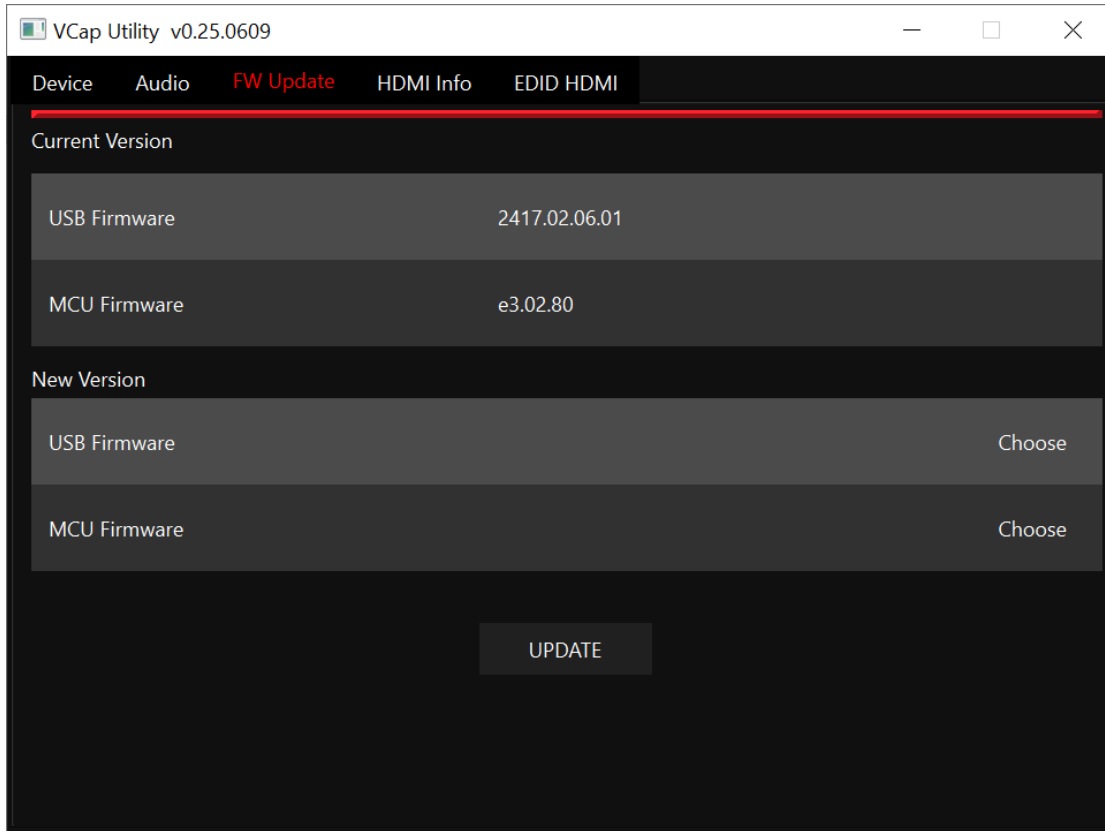

Step 3.

Click *Choose* to select the updated USB Firmware file.

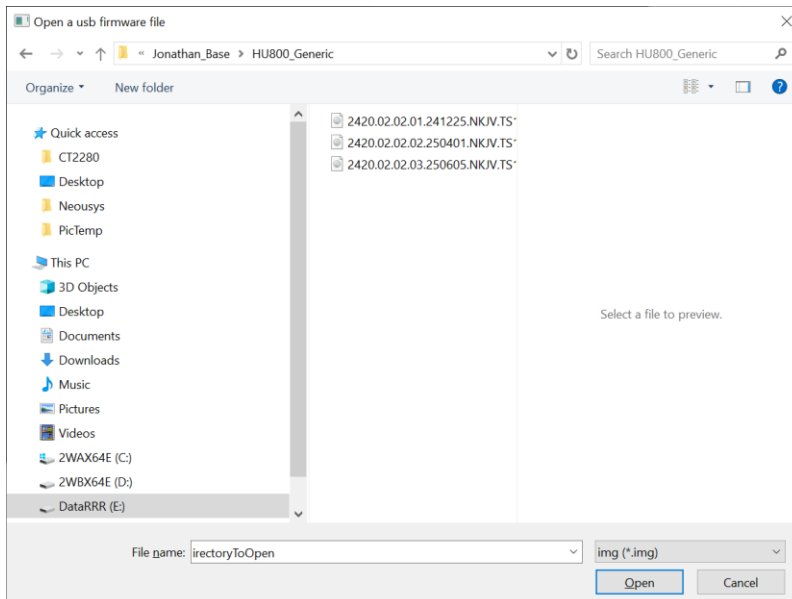


	Version : 1.0	2026/01/27
	Author : Peter	
	File Name : How to update firmware via VCap Utility	

Step 4.


Updated USB Firmware file loaded with version number.


We can also select the updated MCU firmware at the same time to update both firmware components. If both firmware files are loaded, the update process will start with the MCU firmware and then proceed to the USB firmware.

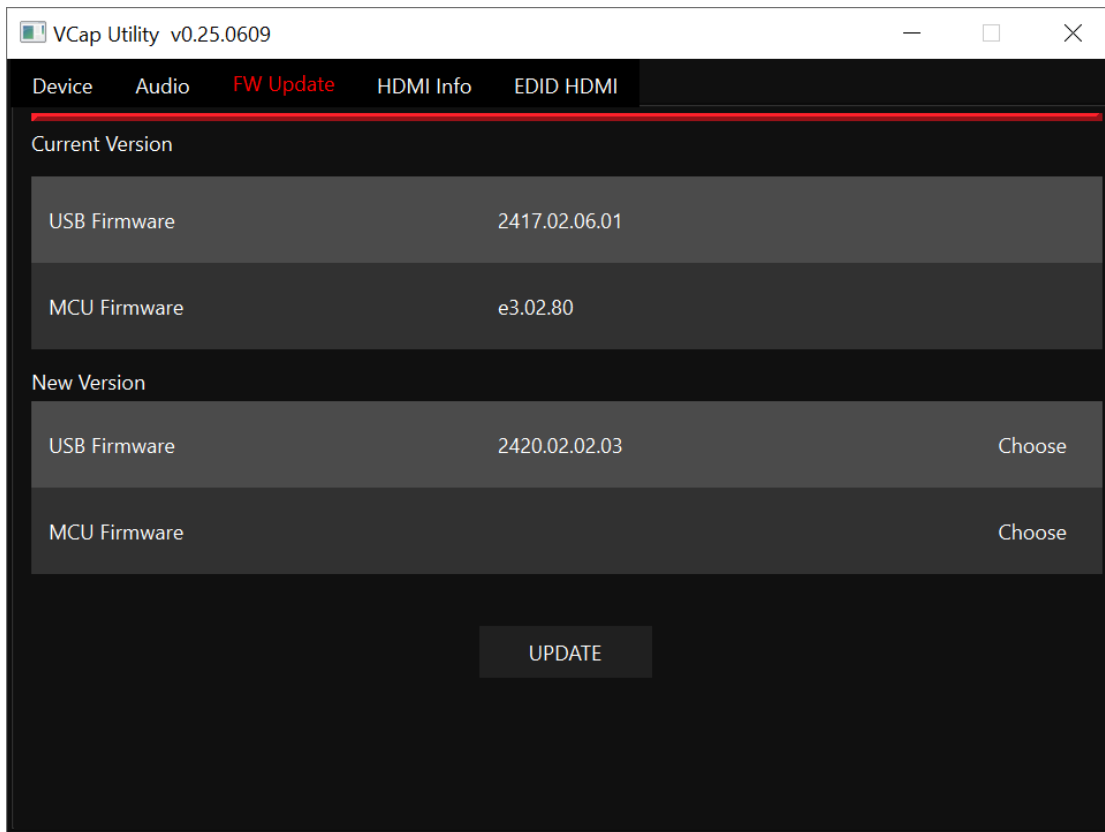

Step 5.


Click *Update* to start the update procedure.

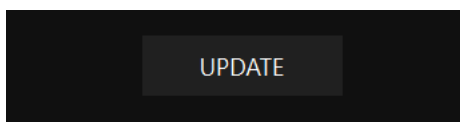

	Version : 1.0	2026/01/27
	Author : Peter	
	File Name : How to update firmware via VCap Utility	

Step 6.

Update is in progress.

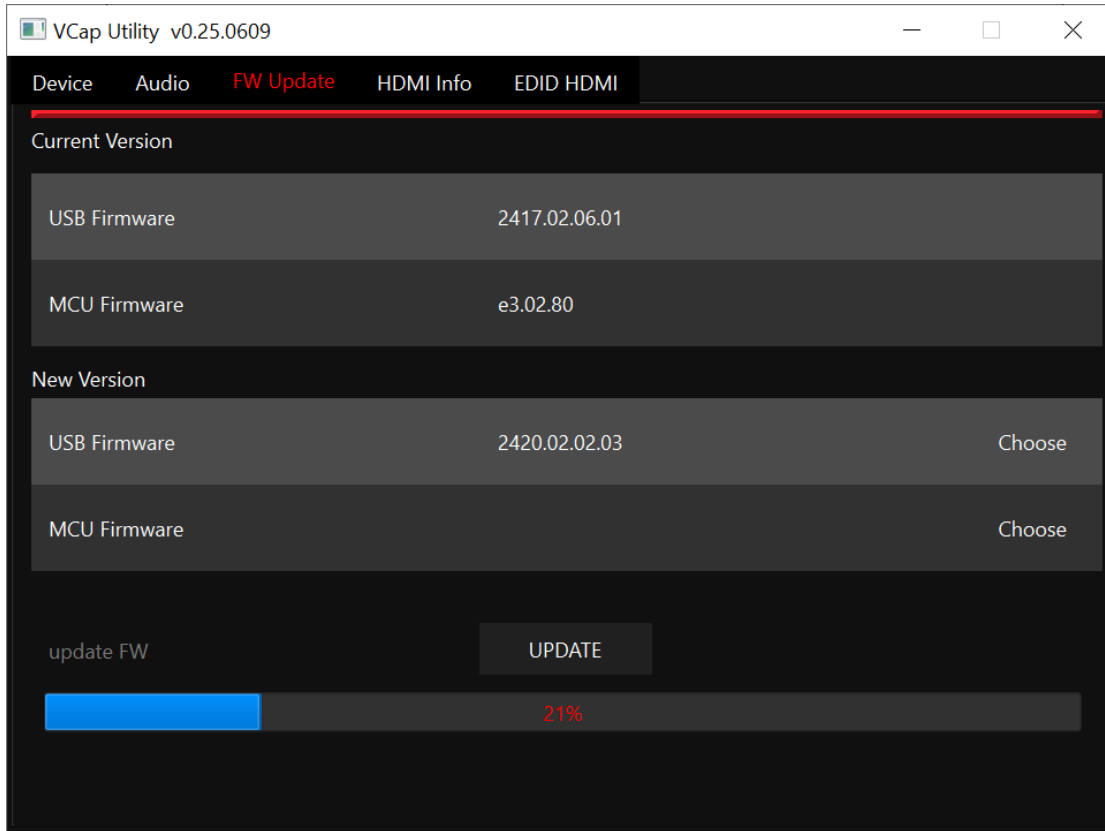

Step 7.

Update completed. Click *OK* will close the VCap Utility automatically. And please re-connect the device to make the new firmware take effect.

